 


Panasonic®

Operating Instructions INTERCHANGEABLE LENS FOR DIGITAL CAMERA

Model No. **H-ES045**

LUMIX

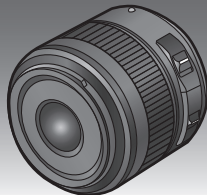

Before connecting, operating or adjusting this product, please read the instructions completely.



LEICA
DG MACRO-ELMARIT

MEGA
O.I.S.

For USA and Puerto Rico assistance, please call: 1-800-211-PANA(7262) or, contact us via the web at: <http://www.panasonic.com/contactinfo>

For Canadian assistance, please call: 1-800-99-LUMIX (1-800-995-8649) or
send e-mail to: lumixconcierge@ca.panasonic.com

PP

VQT2H15-1

Contents

Information for Your Safety	2
Precautions	5
Supplied Accessories	6
Attaching/Detaching the Lens	6
Names and Functions of Components	9
Cautions for Use	10
Troubleshooting	11
Specifications	12
Limited Warranty	14

-If you see this symbol-

Information on Disposal in other Countries outside the European Union



This symbol is only valid in the European Union.
If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

THE FOLLOWING APPLIES ONLY IN CANADA.

This Class B digital apparatus complies with Canadian ICES-003.

Information for Your Safety

Keep the unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games, radio transmitters, high-voltage lines etc.).

- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery and/or the connected AC adaptor. Then reinsert the battery and/or reconnect the AC adaptor and turn the camera on.

The lens can be used with a digital camera compatible with the lens mount standard for the "Micro Four Thirds™ System".

- It cannot be mounted on the Four Thirds™ mount specification camera.

- The digital camera illustrations in these operating instructions show DMC-GF1 as an example.
- The appearance and specifications of products described in this manual may differ from the actual products you have purchased due to later enhancements.
- Four Thirds™ and Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- Micro Four Thirds™ and Micro Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- G MICRO SYSTEM is a lens exchange type digital camera system of LUMIX based on a Micro Four Thirds System standard.
- LEICA is a registered trademark of Leica Microsystems IR GmbH. ELMARIT is a registered trademark of Leica Camera AG. The LEICA DG lenses are manufactured using measurement instruments and quality assurance systems that have been certified by Leica Camera AG based on the company's quality standards.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Panasonic Corporation of North America
One Panasonic Way
Secaucus, NJ 07094

 
Support Contact:

Panasonic Consumer Electronics Company
Telephone No.: 1-800-211-PANA (7262)

Precautions

■ Lens Care

- **Sand and dust can damage the lens. Make sure that no sand or dust gets inside the lens or the terminals when using the lens on a beach, etc.**
- **This lens is not waterproof. If drops of water get onto the lens, wipe the lens with a dry cloth.**
- Do not press the lens with excessive force.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.
- Do not place the lens mount facing downwards. Do not allow the lens contact point ① to become dirty.

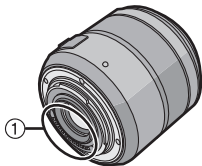

■ About Condensation (Fogging of the Lens)

- Condensation occurs when there are differences in temperature and humidity as described below. Condensation can cause the lens to become dirty and lead to mold and malfunctioning, so exercise caution in the following situations:
 - When the camera is brought indoors from outside during cold weather
 - When the camera is brought into an air-conditioned car
 - When cold air from an air conditioner is directly blown onto the lens
 - In humid places
- Put the camera into a plastic bag to allow it to acclimatize to the surrounding temperature in order to prevent condensation. If condensation occurs, turn the power off and leave it for about two hours. Once the camera acclimatizes to the surrounding temperature the condensation will go away naturally.





Supplied Accessories

[Inspection to be performed when you unpack the unit]

When removing the unit from its packing box, check that the main unit and the supplied accessories are there and also check their external appearance and functions to verify that they have not sustained any damage during distribution and transportation.

If you discover any trouble, contact your vendor before using the product.

Product numbers correct as of September 2009.
These may be subject to change.

1 	2 	3 	4 
VFC4456	VYC1005	VYF3284	VFC4315

1 Lens Storage Bag

2 Lens Hood

3 Lens Cap

4 Lens Rear Cap

(The lens cap and lens rear cap are attached to the interchangeable lens at the time of purchase.)

Attaching/Detaching the Lens

 
- Refer also to the camera's operating instructions for attaching and detaching the lens.

■ Attaching the Lens


- Check that the camera is turned off.

1 Turn the lens rear cap to detach it.

Ⓐ: Lens Rear Cap

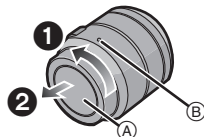

 2 Align the lens fitting marks Ⓑ (red marks) on the camera body and the lens and then rotate the lens in the direction of the arrow until it clicks.

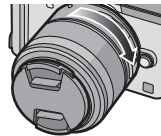


- Do not press the lens release button when you attach a lens.
- Do not try to attach the lens when holding it at an angle to the camera body as the lens mount may get scratched.
- Check that the lens is attached correctly.

■ Detaching the Lens

- Check that the camera is turned off.

 
Press the lens release button ③ while turning the lens as far as possible in the direction of the arrow to detach it.

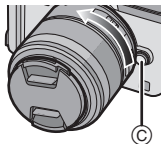

- Attach the lens rear cap so that the lens contact point does not get scratched.
- Attach the body cap to the camera so no dirt or dust will get inside the main unit.


■ Attaching and Detaching the Lens Cap

 - Be careful not to lose the lens cap.

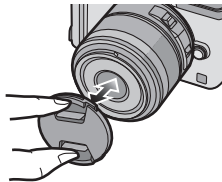

■ Attaching the Lens Hood (Supplied Accessory)

 
Insert the lens hood into the lens with the short sides at the top and bottom, and turn in the direction of the arrow until it stops.

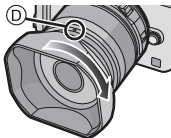

Ⓓ: Fit to the mark

■ Removing the Lens Hood

 Turn the lens hood in the direction of the arrow to detach it.

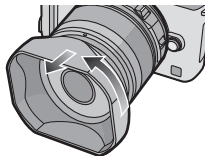


- When taking pictures with the flash with the lens hood attached, the lower portion of the screen may turn dark (vignetting effect) and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.
- When using the AF assist lamp in the dark, detach the lens hood.

■ Attaching Filters

- Vignetting may occur if using 2 or more MC protectors (optional:DMW-LMC46), PL filters (optional:DMW-LPL46) or ND filters (optional:DMW-LND46), or if using thick protectors and/or filters.
- The filter may become impossible to remove if excessively tightened, so please refrain from tightening it too strongly.
- It is possible to attach the lens cap with the filter already attached.
- You cannot attach a conversion lens or adaptor to this lens. A filter may be used, but attaching any other element may cause damage to the lens.

Names and Functions of Components

 ■ Lens

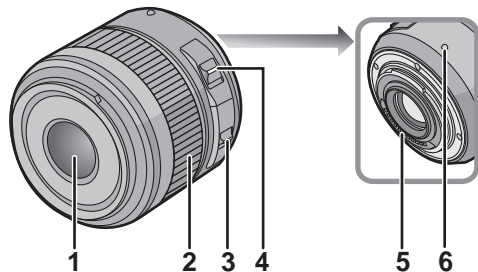

1 Lens surface

2 Focus ring

Rotate to focus when taking pictures with manual focus.

3 [O.I.S.] switch

When the lens is attached to the camera the stabilizer function is set to activate if the [O.I.S.] switch is set to [ON].

- We recommend setting the [O.I.S.] switch to [OFF] when using a tripod.

- The stabilizer function may not be effective in the following cases.
 - When there is a lot of jitter.
 - When using the digital zoom.
 - When taking pictures while following a moving subject.
 - When the shutter speed becomes slower to take pictures indoors or in dark places.
 - When taking close-up pictures.

4 [FOCUS] switch

[FULL]: It can focus between the ranges of 0.15 m (0.5 feet) to ∞ . Use in [FULL] position to take pictures using the macro function.

[LIMIT]: It can focus between the ranges of 0.5 m (1.64 feet) to ∞ . The speed of focusing with auto focus will be faster.

5 Contact point

6 Lens fitting mark

⚙ Note

- When flash recording with a close subject, the light of the flash will be blocked by the lens and part of the picture may be dark. Check the distance from the subject when recording.
- This lens has the following characteristics due to its macro specifications.
 - It takes time to focus.
 - The range of focus is fairly small.

Cautions for Use

■ About the Lens

Take care not to drop or knock the lens. Also take care not to put a lot of pressure on the lens.

- Take care not to drop the bag that you inserted the lens in as it may damage the lens. The camera may stop operating normally and pictures may no longer be recorded.

When using pesticides and other volatile substances around the camera make sure that they do not get onto the lens.

- If such substances get onto the lens they can damage the exterior case or cause the paint to peel.

Do not carry the unit when it is still attached to the camera body.

- Under no circumstances should the unit be stored in any of the following locations since doing so may cause problems in operation or malfunctioning.
 - In direct sunlight or on a beach in summer
 - In locations with high temperatures and humidity levels or where the changes in temperature and humidity are acute
 - In locations with high concentrations of sand, dust or dirt
 - Where there is fire

- Near heaters, air conditioners or humidifiers
- Where water may make the unit wet
- Where there is vibration
- Inside a vehicle

- Refer also to the operating instructions of the digital camera.
- When the unit is not going to be used for a prolonged period, we recommend storing with a desiccant (silica gel). Failure to do so may result in performance failure caused by mold, etc. It is recommended that you check the unit's operation prior to use.
- Do not leave the lens in contact with rubber or plastic products for extended periods of time.
- Do not touch the lens contact point. Doing so can cause failure of the unit.
- Do not disassemble or alter the unit.

Do not use benzine, thinner, alcohol or other similar cleaning agents to clean the lens glass or exterior cabinet.

- Using solvents can damage the lens or cause the paint to peel.
- Wipe off any dust or fingerprints with a soft, dry cloth.
- Use a dry, dust cloth to remove dirt and dust on the focus ring.
- Do not use a household detergent or a chemically treated cloth.

A sound is heard when the camera is turned on or off.

- This is the sound of lens or aperture movement and is not a malfunction.

A sound is heard when the lens is shaken.

- This is the sound of the operation of the stabilizer lens in the lens and is not a malfunction.

Specifications

INTERCHANGEABLE LENS FOR DIGITAL CAMERA

“LEICA DG MACRO–ELMALIT 45 mm/F2.8 ASPH./MEGA O.I.S.”

Focal length	f=45 mm (35 mm film camera equivalent: 90 mm)
Aperture type	7 leaf shutters/iris diaphragm/circular diaphragm
Aperture range	F2.8
Minimum aperture value	F22
Lens construction	14 elements in 10 groups (1 aspherical lens, 1 ED lens)
In focus distance	[FULL]: 0.15 m (0.5 feet) to ∞ / [LIMIT]: 0.5 m (1.64 feet) to ∞ (from the focus distance reference line)
Maximum image magnification	1.0 \times (35 mm film camera equivalent: 2.0 \times)
Optical image stabilizer	Available
Mount	“Micro Four Thirds Mount”
Angle of view	27°
Filter diameter	46 mm (1.81 inch)
Max. diameter	Approx. 63 mm (2.48 inch)
Overall length	Approx. 62.5 mm (2.46 inch) (from the tip of the lens to the base side of the lens mount)
Mass (Weight)	Approx. 225 g (7.94 oz)

■ About the Exposure

The difference between the nominal F value (aperture value displayed on the camera) and the effective F value (actual aperture value) will be greater when taking pictures using the macro function, which allows you to take pictures of close-up subjects enlarged. When using a commercially available stand-alone exposure meter, it is necessary to correct the value depending on the magnification and distance from the subject. Refer to following table for the exposure correction (exposure factor).

It is not necessary to correct the difference between the nominal F value and the effective F value with the automatic exposure of the camera, since it will determine the exposure by measuring the light coming in through the lens.

Guide for exposure correction when using a stand-alone exposure meter

Magnification	1/∞	1/8	1/4	1/3	1/2	1/1.5	1/1
Distance	∞	0.47 m (1.54 feet)	0.28 m (0.92 feet)	0.23 m (0.75 feet)	0.19 m (0.62 feet)	0.17 m (0.56 feet)	0.15 m (0.5 feet)
Nominal F value	F2.8						
Effective F value	F2.8	F3.2	F3.5	F4.0	F4.5	F5.0	F5.6
Exposure correction (Exposure factor) (In steps of 1/3)	±0	+1/3	+2/3	+1	+1 1/3	+1 2/3	+2

- Distance is the actual distance between the recording plane ([\ominus] marked on the body of the digital camera) to the subject.
- Magnification represents the (size of the image of the subject at the recording plane) / (actual size of the subject).

Limited Warranty

FOR U.S.A. and Puerto Rico

**PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF PANASONIC CORPORATION OF NORTH AMERICA**

One Panasonic Way,
Secaucus, New Jersey 07094

Panasonic Digital Still Camera ACCESSORIES LIMITED WARRANTY

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

PRODUCT OR PART NAME	PARTS	LABOR
Interchangeable Lens for Digital Camera	1 (ONE) YEAR	1 (ONE) YEAR

You must Mail-In your product during the warranty period. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

Mail-In Service

For assistance in obtaining service in the United States and Puerto Rico please contact:

Panasonic Camera and Digital Service Center
1590 Touhy Ave.
Elk Grove Village, IL 60007

If repair is needed during the warranty period the purchaser will be required to furnish a sales receipt/proof of purchase indicating date of purchase.

Also, purchaser will be responsible for shipping the unit to the above address.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, travel to and from the servicer, or loss of, or failure to obtain, images, data or other camera memory content. The items listed are not exclusive, but are for illustration only.) ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

FOR CANADA

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT – LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Digital Camera	One (1) year, parts and labour
Digital Photo Peripherals	One (1) year, parts and labour
Digital Camera Accessories	Ninety (90) days, parts and labour

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries, printer ink cartridge and paper are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

WARRANTY SERVICE/PRODUCT REPAIRS

For product operation repairs and information assistance, please contact:

Our Customer Care Centre: 1-800 #:	1-800-99-LUMIX (1-800-995-8649)
Fax #:	(905) 238-2360
Lumix Email link:	lumixconcierge@ca.panasonic.com
Email link:	"Customer support" on www.panasonic.ca

Índice

Información para su seguridad	18
Prevencción contra las averías	21
Accesorios suministrados	22
Unir y quitar el objetivo	22
Nombres y funciones de los componentes	24
Precauciones para el uso	26
Búsqueda de averías	27
Especificaciones	28

-Si ve este símbolo-

Información sobre la eliminación en otros países no pertenecientes a la Unión Europea



Este símbolo sólo es válido en la Unión Europea. Si desea desechar este producto, póngase en contacto con las autoridades locales o con su distribuidor para que le informen sobre el método correcto de eliminación.

LO SIGUIENTE SÓLO INTERESA A CANADÁ.

Este aparato digital de la clase B cumple con ICES-003 canadiense.

Información para su seguridad

Mantenga la unidad lo más lejos que sea posible de equipos electromagnéticos (como hornos de microondas, televisores, vídeo juegos, transmisores radio, líneas de alto voltaje, etc.).

- No utilice la cámara cerca de teléfonos móviles, ya que lo de hacerlo puede producir ruido que afectará negativamente a las imágenes y el sonido.
- Si la cámara queda afectada negativamente por un equipo electromagnético y deja de funcionar correctamente, apague la cámara y quite la batería y/o el adaptador de CA conectado. Luego vuelva a insertar la batería y/o vuelva a conectar el adaptador de CA y encienda la cámara.

El objetivo puede usarse con una cámara digital compatible con el estándar de montaje de objetivos del "Micro Four Thirds™ System".

- No se puede montar en una cámara con estándar de soporte Four Thirds™.
- Las figuras de la cámara digital en estas instrucciones de funcionamiento muestran la DMC-GF1 en concepto de ejemplo.
- El aspecto y las especificaciones de los productos descritos en este manual pueden diferir de los productos reales que usted ha comprado debido a aumentos sucesivos.
- El logotipo Four Thirds™ y Four Thirds son marcas comerciales o marcas comerciales registradas de Olympus Imaging Corporation, en Japón, los Estados Unidos, la Unión Europea y otros países.
- El logotipo Micro Four Thirds™ y Micro Four Thirds son marcas comerciales o marcas comerciales registradas de Olympus Imaging Corporation, en Japón, los Estados Unidos, la Unión Europea y otros países.
- G MICRO SYSTEM es un sistema de cámara digital con objetivo intercambiable de LUMIX basado en el estándar Micro Four Thirds System.

- LEICA es una marca registrada de Leica Microsystems IR GmbH. ELMARIT es una marca registrada de Leica Camera AG. Los objetivos LEICA DG se fabrican usando instrumentos de medida y sistemas de garantía de calidad certificados por Leica Camera AG en base a los estándares de calidad de la compañía.
- Los demás nombres, nombres de sociedades y nombres de productos citados en estas instrucciones son marcas de fábrica o marcas registradas.

LO SIGUIENTE SÓLO SE APLICA EN LOS EE. UU.

Notas FCC:

Se ensayó este equipo y se comprobó que está de conformidad con los límites de un dispositivo digital de la clase B, de acuerdo con la Parte 15 de las Reglas FCC.

Estos límites se han ideado para proporcionar una razonable protección contra las interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede radiar energía de frecuencia radio y, por si no se instala y se utiliza de acuerdo con las instrucciones, puede ocasionar interferencia dañina a las comunicaciones radio. Aunque no hay garantía de que no pueda tener lugar interferencia en especiales instalaciones. Si este equipo causa interferencia a la recepción de radio o televisión que pueden determinarse apagando y encendiendo el equipo, se anima al usuario intentar corregir la interferencia tomando una de las medidas a continuación:

- Vuelva a orientar o a colocar la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de un circuito diferente del que está conectado el receptor.
- Llame al concesionario o un técnico experto de radio y televisión para ayuda.

Todo cambio o modificación a este equipo sin autorizar invalidará el título del usuario para hacer funcionar este dispositivo.

Este dispositivo cumple con la Parte 15 de las Reglas FCC. El funcionamiento está sujeto a las dos condiciones a continuación: (1) Este dispositivo podría no causar interferencia dañina y (2) este dispositivo tiene que aceptar toda la interferencia recibida, incluyendo la que puede causar un funcionamiento no deseado.

Parte responsable:

 
Panasonic Corporation of North America
One Panasonic Way
Secaucus, NJ 07094

Contacto de asistencia:

Panasonic Consumer Electronics Company
Teléfono: 1-800-211-PANA (7262)

■ Atención del objetivo

- La arena y el polvo pueden dañar el objetivo. Cuando usa el objetivo en una playa, tenga cuidado de que ni arena ni polvo entren en el interior del objetivo o los terminales, etc.
- Este objetivo no es impermeable. Si caen gotas de agua en el objetivo, límpielo con un paño seco.
- No ejerza demasiada presión en el objetivo.
- Cuando hay suciedad (agua, aceite, huellas dactilares, etc.) en la superficie del objetivo, la imagen puede salir afectada. Limpie ligeramente con un paño blando y seco antes y después de tomar las imágenes.
- No meta el soporte del objetivo mirando hacia abajo. No deje que se ensucien los puntos de contacto ①.

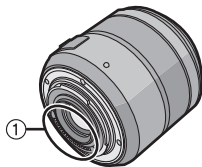

■ Acerca de la condensación (Empañamiento del objetivo)



 
 
- La condensación ocurre cuando se encuentra una diferencia en la temperatura y humedad como se describe abajo. La condensación puede hacer ensuciar el objetivo y producir hongos y un funcionamiento defectuoso, por lo tanto ponga cuidado en las situaciones a continuación:
 - Cuando lleva la cámara en casa desde el aire libre durante un tiempo frío
 - Cuando lleva la cámara dentro de un coche con aire acondicionado
 - Cuando sopla en el objetivo aire frío desde un acondicionador de aire
 - En lugares húmedos
- Para impedir la condensación, meta la cámara en una bolsa de plástico para que se aclimate a la temperatura ambiente. Si ocurre condensación, apague la alimentación y la deje así durante dos horas. Una vez de que la cámara se haya aclimatado a la temperatura ambiente en empañamiento desaparece naturalmente.

Accesorios suministrados

[Controles a realizar cuando va a desembalar la unidad]

Al quitar la unidad de su embalaje, compruebe que se encuentren la unidad principal y los accesorios suministrados. Además compruebe el aspecto externo y las funciones para verificar que no hayan padecido daños durante la distribución y el transporte. Por si encuentra un cualquier problema, antes de usar el producto llame a su comerciante.

Los números de producto se aplican desde septiembre de 2009. Estos pueden estar sujetos a modificaciones.

1 	2 	3 	4 
VFC4456	VYC1005	VYF3284	VFC4315

- 1** Bolsa de almacenamiento del objetivo
- 2** Visera del objetivo
- 3** Tapa del objetivo
- 4** Tapa trasera del objetivo
(Al momento de la compra la tapa del objetivo y la tapa trasera del mismo están unidas al objetivo intercambiable.)

Unir y quitar el objetivo

 
- Se refiera también a las instrucciones de funcionamiento de la cámara para unir y separar el objetivo.

■ Unión del objetivo

- Compruebe que la cámara esté apagada.


1 Gire la tapa trasera del objetivo para separarla.

Ⓐ: Tapa trasera del objetivo

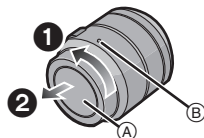

2 Alinee las marcas para ajustar el objetivo Ⓑ (marcas rojas) ubicadas en el cuerpo de la cámara y el mismo objetivo, luego gire éste en la dirección de la flecha hasta que dispare.

 
- No pulse el botón de desenganche del objetivo cuando va a unir un objetivo.
- Como el soporte del objetivo podría salir rayado, no trate de unir el objetivo a la cámara manteniéndolo de ángulo.
- Compruebe que el objetivo esté unido correctamente.

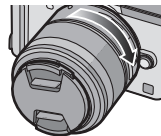

■ Separación del objetivo

- Compruebe que la cámara esté apagada.

 
Pulse el botón de desenganche del objetivo ③ mientras gira hasta que sea posible el objetivo en la dirección de la flecha para quitarlo.

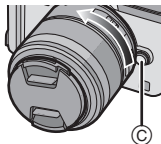

- Una la tapa trasera de manera que el punto de contacto del objetivo no salga rayado.
- Una la tapa del cuerpo a la cámara para que ni suciedad ni polvo entren dentro de la unidad principal.


■ Unión y separación de la tapa del objetivo

 - Ponga cuidado en no perder la tapa del objetivo.

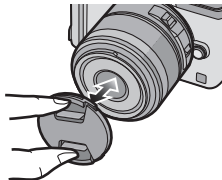

■ Unión de la visera del objetivo (Accesorio suministrado)

 
Inserte la visera del objetivo con las partes cortas arriba y abajo, luego gírela en la dirección de la flecha hasta que dispare.

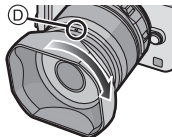

④: Ajustando hacia la marca

■ Quitar la visera del objetivo

 Gire la visera del objetivo en la dirección de la flecha para quitarla.

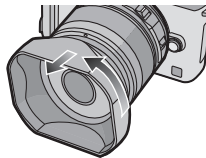


- Cuando toma las imágenes con el flash y tiene unida la visera del objetivo, la porción inferior de la pantalla podría ponerse oscura (efecto de viñeteado) y el control del flash podría inhabilitarse debido a que éste podría ser oscurecido por la misma visera. Le recomendamos que quite dicha visera.
- Cuando usa la lámpara de ayuda AF en la oscuridad, quite la visera del objetivo.

■ Unión de los filtros

- Puede tener lugar viñeteado si usa 2 o más protectores MC (opcionales:DMW-LMC46), filtros PL (opcionales:DMW-LPL46) o filtros ND (opcionales:DMW-LND46), o bien si usa protectores y/o filtros espesos.
- Tal vez sea imposible de retirar el filtro si está demasiado apretado, por lo que no debe apretarlo demasiado fuerte.
- Se puede colocar la tapa del objetivo con el filtro ya colocado.
- No consigue acoplar un objetivo de conversión o adaptador a este objetivo. Puede usarse un filtro, pero acoplar cualquier otro elemento puede dañar el objetivo.

Nombres y funciones de los componentes

 ■ Objetivo

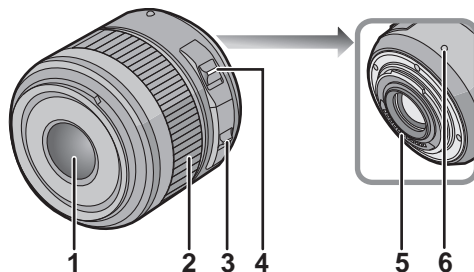

1 Superficie del objetivo

2 Anillo del enfoque

Ruotare per mettere a fuoco quando si scattano fotografie utilizzando la messa a fuoco manuale.

3 Interruptor [O.I.S.]

Cuando a la cámara está unido el objetivo, está ajustada la función estabilizadora para ver si el interruptor [O.I.S.] está ajustado en [ON].

- Le recomendamos que ajuste el interruptor [O.I.S.] a [OFF] cuando usa un trípode.
- La función estabilizadora podría no funcionar suficientemente en los casos a continuación.
 - Cuando hay demasiada trepidación.
 - Cuando usa el zoom digital.
 - Cuando toma imágenes mientras sigue sujetos en movimiento.
 - Cuando se reduce la velocidad de obturación para tomar imágenes en casa o en lugares oscuros.
 - Al tomar imágenes en primer plano.

4 Interruptor [FOCUS]

[FULL]: Puede enfocar entre los rangos de 0,15 m (0,5 pies) a ∞ . Úselo en posición [FULL] si desea captar imágenes utilizando la función macro.

[LIMIT]: Puede enfocar entre los rangos de 0,5 m (1,64 pies) a ∞ . Con el enfoque automático, la velocidad de enfoque aumentará.

5 Punto de contacto

6 Marca para ajustar el objetivo

Nota

- Cuando graba usando el flash estando cerca del sujeto, la luz del flash será bloqueada por el objetivo y parte de la imagen puede quedar oscura. Compruebe la distancia desde el sujeto cuando graba.
- Este objetivo tiene las siguientes características debidas a su especificaciones macro.
 - Lleva tiempo para enfocar.
 - El rango del enfoque es bastante pequeño.

Precauciones para el uso

■ Acerca del objetivo

Tenga cuidado de no hacer caer el objetivo ni le choque contra. Asimismo tenga cuidado de no presionarlo demasiado.

- Tenga cuidado de no hacer caer la bolsa en la que cabe el objetivo. Éste podría dañarse, la cámara podría dejar de funcionar normalmente y las imágenes ya podrían no grabarse.

Cuando usa pesticidas y otras sustancias volátiles alrededor de la cámara tenga cuidado de que no entre en el objetivo.

- Si dichas sustancias caen en el objetivo, éstas pueden dañarlo o hacer desconchar su barniz.

No transporte la unidad si ésta está todavía unida al cuerpo de la cámara.

- De ninguna manera la unidad debe ser usada o almacenada en uno de los siguientes lugares ya que lo de hacerlo podría perjudicarla o producir un funcionamiento defectuoso.
 - Bajo la luz directa del sol o bien a lo largo de la costa durante el verano
 - En lugares donde haya altas temperaturas o altos niveles de humedad o bien donde sean repentinos los cambios de temperatura y humedad
 - En lugares donde haya altas concentraciones de arena, polvo o suciedad

- Donde haya llamas
- Cerca de calefactores, acondicionadores de aire o humedecedores
- Donde el agua puede hacer mojar la unidad
- Donde haya vibraciones
- Dentro de un vehículo
- Se refiera también a las instrucciones de funcionamiento de la cámara digital.
- Cuando no ha de ser usada la unidad por un período prolongado, le recomendamos guardar con un desecante (silicagel). El hecho de no hacerlo podría ocasionar una avería causada por el moho etc. Se recomienda que compruebe el funcionamiento de la unidad antes de usarla.
- No deje el objetivo en contacto con productos de plástico durante largos períodos de tiempo.
- No toque los contactos eléctricos de la unidad. Lo de hacerlo puede causar avería en la unidad.
- No desmonte ni modifique la unidad.

No utilice gasolina, diluyente, alcohol u otros agentes de limpieza parecidos para limpiar la unidad.

- El hecho de usar disolventes puede dañar el objetivo y hacer desconchar su barniz.
- Quite cualquier indicio de polvo o huellas dactilares con un paño blando y seco.
- Use un paño suave y seco para eliminar suciedad y polvo de la anilla de enfoque.
- No use detergentes para cocina o un paño tratado químicamente.

Búsqueda de averías

Se oye un sonido cuando se enciende o se apaga la cámara.

- Éste es el sonido del objetivo o el movimiento de abertura y no es un funcionamiento defectuoso.

Se oye un sonido al sacudir el objetivo.

- Es el sonido del funcionamiento del estabilizador del objetivo y no constituye un problema de funcionamiento.

Especificaciones

ÓPTICA INTERCAMBIABLE PARA CÁMARA DIGITAL “LEICA DG MACRO–ELMALIT 45 mm/F2.8 ASPH./MEGA O.I.S.”


Longitud focal	f=45 mm (Igual a una cámara de película de 35 mm: de 90 mm)
Tipo de abertura	7 obturaciones de hoja/diafragma iris/diafragma circular
Gama de abertura	F2.8
Valor de abertura mínimo	F22
Estructura del objetivo	14 elementos en 10 grupos (1 objetivo esférico, 1 objetivo ED)
En la distancia del enfoque	[FULL]: 0,15 m (0,5 pies) a ∞ / [LIMIT]: 0,5 m (1,64 pies) a ∞ (desde la línea de referencia de la distancia del enfoque)
Máxima ampliación de la imagen	1,0× (Igual a una cámara de película de 35 mm: 2,0×)
Estabilizador óptico de la imagen	Disponible
Soporte	“Micro Four Thirds Mount”
Ángulo visual	27°
Diámetro del filtro	46 mm (1,81 pulgadas)
Diámetro máx.	Aprox. 63 mm (2,48 pulgadas)
Longitud total	Aprox. 62,5 mm (2,46 pulgadas) (desde la punta del objetivo al lado de la base del soporte del objetivo)
Peso	Aprox. 225 g (7,94 onzas)

■ Acerca de la exposición

La diferencia entre el valor F nominal (valor de apertura visualizado en la cámara) y el valor F efectivo (valor de apertura real) será mayor cuando se captan imágenes usando la función macro, lo cual le permite captar imágenes ampliadas de sujetos en primer plano. Cuando use un medidor de exposición autónomo disponible en el mercado, es necesario corregir el valor dependiendo de la amplificación y distancia desde el sujeto. Consulte la tabla siguiente en lo relativo a la corrección de la exposición (factor de exposición). Hay que corregir la diferencia entre el valor F nominal y el valor F efectivo con la exposición automática de la cámara, ya que determinará la exposición cuantificando la luz que entra a través del objetivo.

Guía para corregir la exposición al usar un medidor de exposición autónomo

Ampliación	1/∞	1/8	1/4	1/3	1/2	1/1,5	1/1
Distancia	∞	0,47 m (1,54 pies)	0,28 m (0,92 pies)	0,23 m (0,75 pies)	0,19 m (0,62 pies)	0,17 m (0,56 pies)	0,15 m (0,5 pies)
Valor F nominal	F2.8						
Valor F efectivo	F2.8	F3.2	F3.5	F4.0	F4.5	F5.0	F5.6
Corrección de la exposición (Factor de exposición) (En intervalos de 1/3)	±0	+1/3	+2/3	+1	+1 1/3	+1 2/3	+2

- Distancia es la distancia real entre el plano de grabación ([) marcado en el cuerpo de la cámara digital) al sujeto.
- La amplificación representa el (tamaño de la imagen del sujeto en el plano de grabación) / (tamaño real del sujeto).

Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

© Panasonic Corporation 2009



Printed in Japan